


GENUINE SPARE PARTS FOR INCINERATORS


# **SPARES FOR BURNER**

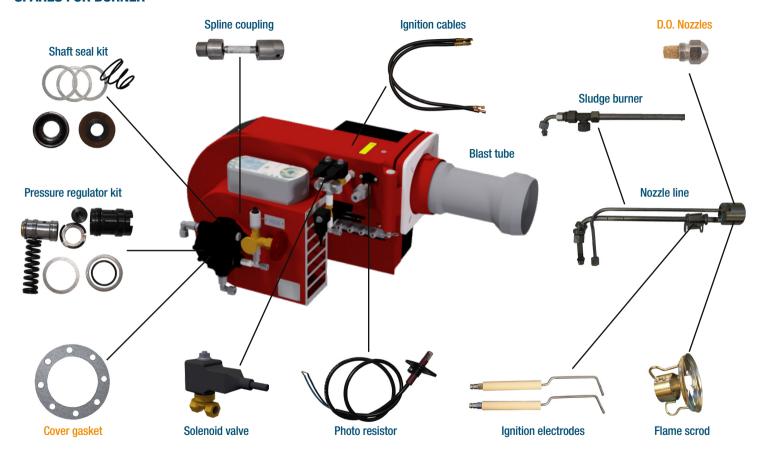

# **SPARES FOR COMBUSTION CHAMBER**



# **SPARES FOR SLUDGE DOSAGE ASSEMBLY**

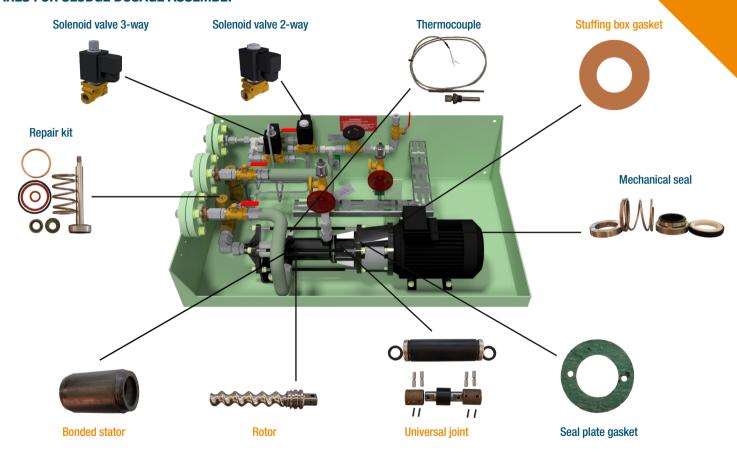

# ONE YEAR WEAR AND TEAR PARTS KIT - GENERAL LIST

**SPARES FOR BURNER** 

**SPARES FOR COMBUSTION CHAMBER** 

Diesel nozzle I

Glass fibre rope (door gasket)

Diesel nozzle II Cover gasket Sealing compound (glue for door gasket)

Thermocouple "N"

**SPARES FOR SLUDGE DOSAGE PUMP** 

**SPARES FOR FLUE GAS FAN** 

**Bonded stator** 

V-belts

Rotor

Universal joint

Stuffing box gasket

The exact content depends on incinerator model, TeamTec Generation (TG) and production year.

#### **ONE YEAR WEAR AND TEAR PARTS KIT**

- · Contains spare parts that should be changed during one year operation
- These spare parts should be replaced regularly with normal preventive maintenance

## **RECOMMENDED ONBOARD REPAIR PARTS KIT**

- Contains spare parts to be kept onboard at any given time for unforeseen events
- Most common causes of downtime can be eliminated
- Consumed spare parts should be replaced



# RECOMMENDED ONBOARD REPAIR PARTS KIT - GENERAL LIST

## **SPARES FOR BURNER**

Flame scrod Blast tube **lanition electrodes** Ignition cables Nozzle line Sludge burner assembly

Pressure regulator kit

Photo resistor

Solenoid valve

Spline coupling complete

Shaft seal kit

## SPARES FOR SLUDGE DOSAGE ASSEMBLY

Repair kit for sludge valve Solenoid valve 2-way Solenoid valve 3-way Seal plate gasket Mechanical seal Stuffing box gasket

Thermocouple with pocket

## SPARES FOR COMBUSTION CHAMBER

Repair substance for refractory Flue gas restriction ring bricks

#### **SPARES FOR FLUE GAS FAN**

Thermocouple "K" **Shaft bearings** 



The exact content depends on incinerator model, TeamTec Generation (TG) and production year.