





One Year Wear and Tear Parts

General list

Spares for Burner assembly:
Nozzle I
Nozzle II
Cover gasket
Spares for Sludge dosage assembly:
Bonded Stator
Rotor
Universal Joint
Stuffing Box Gasket
Spares for Combustion chamber assembly:
Glassfibre Rope (door gasket)
Sealing Compound (glue for door gasket)
Spares for Flue gas fan assembly:
V-belts

The exact content varies depending on model and year built.